



IGNITION AND ACCESSORY RELAY

INSPECTION

REMOVAL AND INSTALLATION

See Fig. BE-9.

1. Disconnect battery ground cable.
2. Remove instrument lower cover on the right side.
3. Disconnect harness connector.
4. Remove relay on dash side.
5. Install relay in the reverse order of removal.

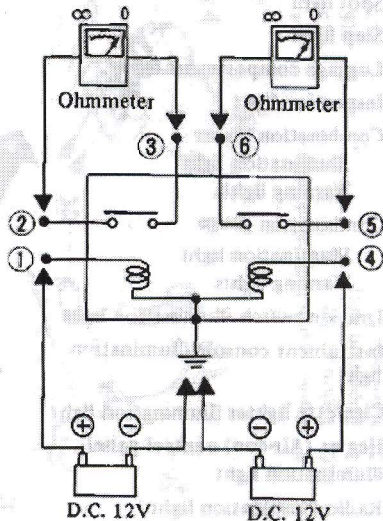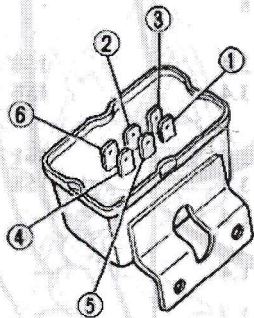

BE019D

Fig. BE-14 Ignition and Accessory Relay